



## FEATURES OF PROGRAM PLUS/ USER GUIDE

Your Blendtec Blender features the most advanced microprocessor available. Nine (9) blending speeds and thirty (30) pre-programmed blend cycles are stored within its memory. With the touch of a few buttons, you determine your blender cycle configuration. Experiment with your recipes and the programs to determine which cycles are best suited for you.

The thirty (30) cycles are shown in the chart located at the end of this fold-out. Note the following:

- Cycles 1-6, labeled light, are for low volume, non-frozen product
- Cycles 7-12, labeled medium, are for medium volume, some ice
- Cycles 13-17, labeled heavy, are for large volume, frozen fruit, and ice.
- Cycle 18 features a manual ramp control. Simply hold down the button until the desired speed is achieved. Release the button, and the blender will continue at that speed for 50 seconds.
- Cycles 19-24 are 50 second cycles for blending consistently at speeds 1, 2, 3, 5, 7, and 9, respectively
- Cycles 25-30 are specialized pulse buttons that operate at speeds 1, 2, 3, 5, 7, and 9, respectively. Blending will continue until button is released.

You can choose from the three standard profiles (Smoothie, Coffee, Multipurpose) by rapidly entering the three digit code into the keypad. You may also create your own profile configurations by following the directions in the "Custom Profile" box found in the chart located directly to the right.

Choose from thirty (30) pre-programmed blend cycles found on the chart located on the last page. If you would like, you can create your own cycles for your blendtec blender. Call Blendtec at 1-800-253-6383 for information on obtaining a custom programming kit for your machines.


To select profile, enter the corresponding 3 digit profile code

### Custom Profile: 2-4-P

Step 1: Press button program code (2-4-P)  
Step 2: Press button you'd like to program  
Step 3: Choose a cycle from the "Cycle Chart"  
Step 4: Enter the 2-digit program code (found in the box on the right hand side of cycle). If the program is accepted the machine will beep twice.

Example - Program button 1 with cycle 25  
Step 1: Press 2-4-P (Display will read "Button")  
Step 2: Press button 1 (Display will read "Enter Cycle")  
Step 3: Find program code for cycle 25  
Step 4: Press P-1

**\*RESTORE TO FACTORY  
PROFILE: Press 5-2-1**  
(This restores original blend profile, as received from factory)

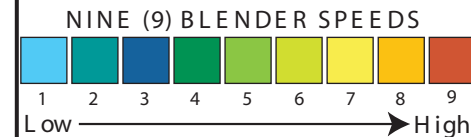

### Smoothie: 3-P-2

Button 1.  
Small Smoothie, Thawed Fruit  
20 Seconds  
Cycle 6

Button 2.  
Large Smoothie, Yogurt, IQF  
25 Seconds  
Cycle 12

Button 3.  
Granita, Medium Milkshake  
14 Seconds  
Cycle 2

Button 4.  
Large Smoothie, Yogurt, IQF  
23 Seconds  
Cycle 11

Button 5.  
Large Smoothie, IQF, Yogurt, Ice  
40 Seconds  
Cycle 16

Button 6. Pulse  
Cycle 29

### Coffee: 3-P-1

Button 1.  
Ice Cappuccino Small  
14 Seconds  
Cycle 5

Button 2.  
Ice Cappuccino Large  
20 Seconds  
Cycle 8

Button 3.  
Light Juice, Small Milkshake  
12 Seconds  
Cycle 1

Button 4.  
Granita, Medium Milkshake  
12 Seconds  
Cycle 2

Button 5.  
Large Smoothie, IQF, Yogurt, Ice  
32 Seconds  
Cycle 14

Button 6. Pulse  
Cycle 29

### Multipurpose: 3-P-3

Button 1.  
Milkshake  
18 Seconds  
Cycle 3

Button 2.  
Granita, Medium Milkshake  
14 Seconds  
Cycle 2

Button 3.  
Ice Cappuccino Small  
14 Seconds  
Cycle 5


Button 4.  
Large Smoothie, Yogurt, IQF  
25 Seconds  
Cycle 12

Button 5.  
Large Smoothie, IQF, Yogurt, Ice  
40 Seconds  
Cycle 16


Button 6. Pulse  
Cycle 29

## CYCLE CHART: 30 Pre-Programmed Cycles


Light - low volume, non frozen (12oz)

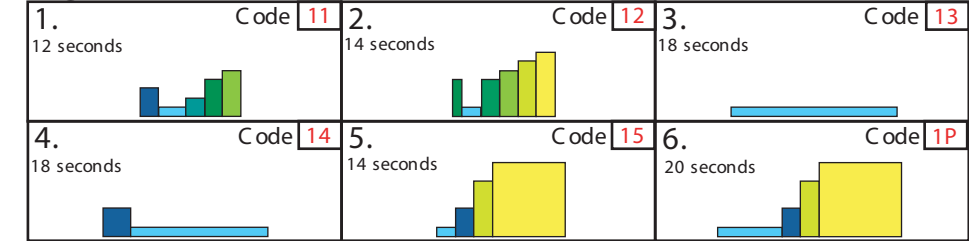


Medium - medium volume, some ice (18oz)

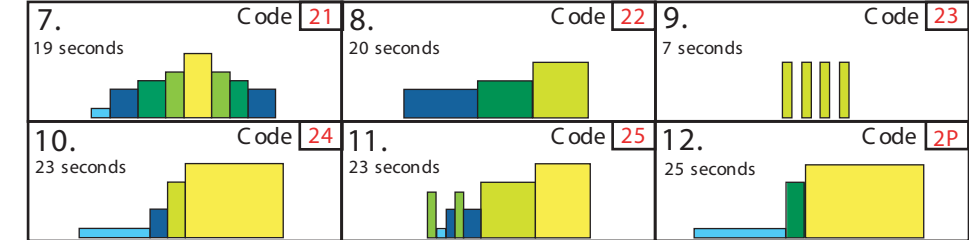

Heavy - heavy volume, frozen fruit and ice (24oz)

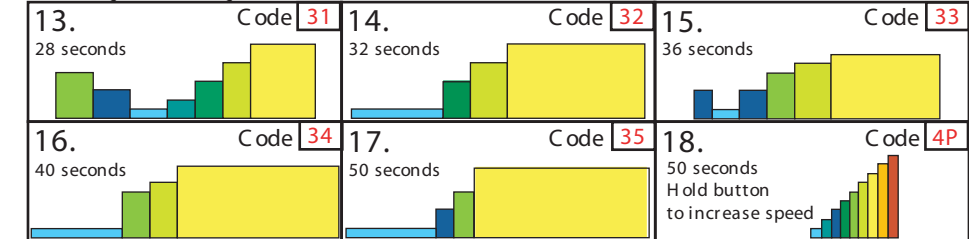

50 Second Cycles - Constant Speed

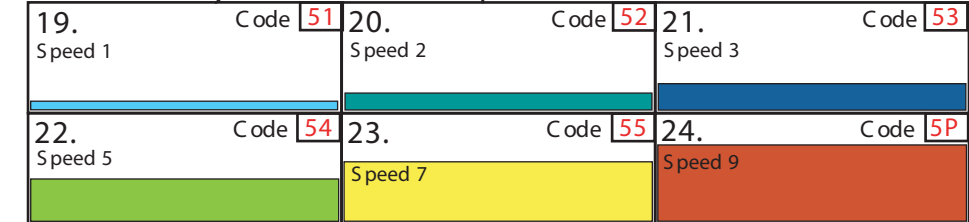

Pulse Cycles

